4122B/4122C
Foot SPA Chair

Welcome to use our products. A1
Please read the user manual carefully before using the products.
Our company reserves the right to improve design and modify
the products without prior notice.

1. About This Manual

This manual shall only be used for the reference of operation of this particular model. If the manual is used for other purposes, we will not undertake any according consequences and responsibility.
All information of this manual shall be protected by copyright and shall not be copied and translated in any part of this specification without the written consent of manufacturer.

2. Packing list

No.	Part	Picture	QTY	No.	Part	Picture	QTY
01	Foot Support		1	11	Rubber Gasket		1
02	Drainage Pipe		1	12	handle of switcher		1
03	Shower Head		1	13	Allen Key		1
04	Seal Ring		2	14	Allen Key		1
05	Seal Ring		2	15	Power Cord		1
06	M12X45 Hexagon Screw		2	16	Small Gearing		2
07	ф12Gasket		2	17	Big Gearing		2
05	Φ12Gasket		4	18	Hand Controller		1
09	M8X40 Screw		4				
10	φ8Gasket		4				

3. Warning

[PAY ATTENTION ON FOLLOWING TO PREVENT ANY INJURY, ELECTRIC SHOCK, FIRE OR OTHER DANGER]

1. Unplug the power cord before do some cleaning
2. Plug completely into the socket, or else fire or electric shock may occur.
3. Do not stand on the product.
4. Children shall not play with the appliance. Please keep children away from it. The backrest should go up to Max position when you are away.
5. Keep product away from bathroom or wet place, avoid electric shock or faulty performance. Hand controller should be kept away from water as well.
6. Do not use product in the place where is doing some painting/ coating or oxygen supplying.
7. Switch off the device before unplug the power cord from socket.
8. Do not open or disassemble foot SPA without authorization, so as not to be hurt by electric shock.
9. Children aged from 8 years and above, persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, should operate this chair under supervision or instruction concerning use of the appliance in a safe way, and understand the hazards involved. Cleaning and daily maintenance shall not be done by children without supervision.
10. If the power cord is damaged, please contact manufacturer, its service agent or similarly qualified persons for replacement, so as to avoid hazard.
11. If water leaks from the appliance, the appliance should no longer be used.

4. Cautions On Security

1. People who are under following sickness or having medical treatment should consult with doctor before use.
   (a) Women in Pregnant, people in sick or in poor health.
   (b) People with pain on the back, neck, shoulder or hip.
   (c) People who are implanted cardiac pacemaker or other medical devices which may cause electromagnetic interferences.
   (d) Patients with heart disease
   (e) Patients who are prohibited to having massage due to thrombosis, aneurysm, severe varicosity or other disease of circulation system.
   (f) Patients with curved vertebral column.
2. Do not put your finger/ toe into the gap between backrest and seat or armrest, even the joint part under seat as well.
3. It would be better to wear light clothes for treatment. But do not without clothing please.
   Do not have treatment when you wear something hard on your head.
   (a) Do not massage for over 5min at the first time of using this product. This is to avoid discomfort for muscle. You can increase the intensity or time of massage after some time.
   (b) Do not massage one part of body for over 5min every treatment.
   (c) Massage for overtime or improper intensity might stimulate muscle or nervous system excessively.
   (d) The total massage time has set up to no more than 20min. Four-wheeled massage hand will automatically stop working after 20min.
   (e) Remove the backrest cushion if you would like a massage with stronger effect. But please pay more attention on this way, since it's possible to cause back be painful or hurt. Besides, do not massage in this way for more than 15min each time.
4. If you feel uncomfortable or painful during massage, please stop massaging.
5. Do not have treatment after drink.
6. Massage with minimum intensity and speed at the first time of use. You might make some adjustment after use for some time.
7. Massage with minimum intensity and speed at the first time of use. You might make some adjustment after use for some time.

5. Installation Steps

1. Open the packing carton, connect and tighten the water pipe with shower head. (See as illustration 1)
2. Assemble switch A as the installation diagram below. Put the metal cover on the square plastic strip. And then screw the inner hexagon screw on square plastic strip through the cover hole. Finally stopple the cover hole with red stopple.

Illustration 1

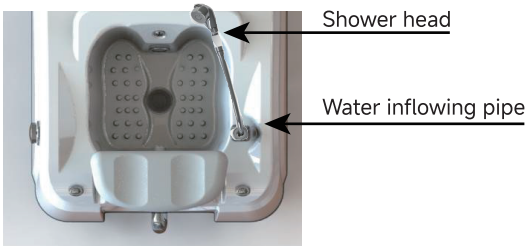

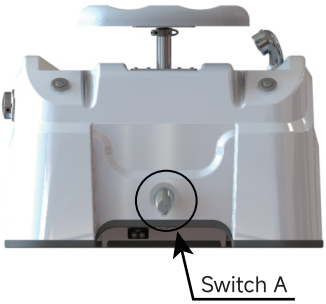

Installation Diagram of Switch A

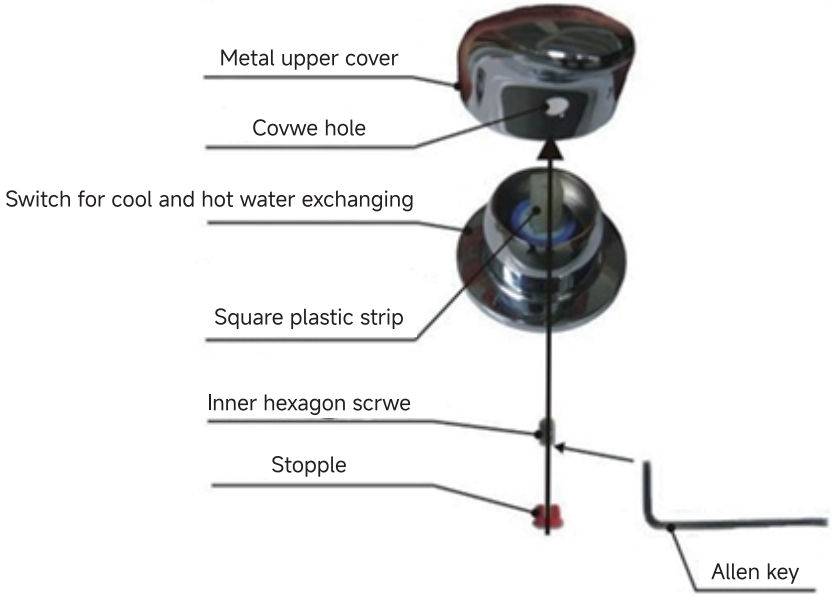

3. Assemble the foot support, supporting plate and base of foot support as photo below.

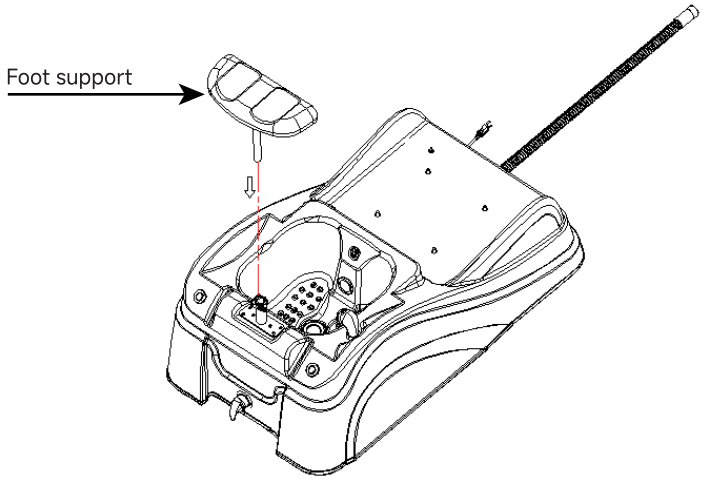

4. Assemble the drainage pipe and inflow pipe as following. (Left is for cool water, right is for hot water)
   a) See illustration 2 for the standard configuration.

Illustration 2

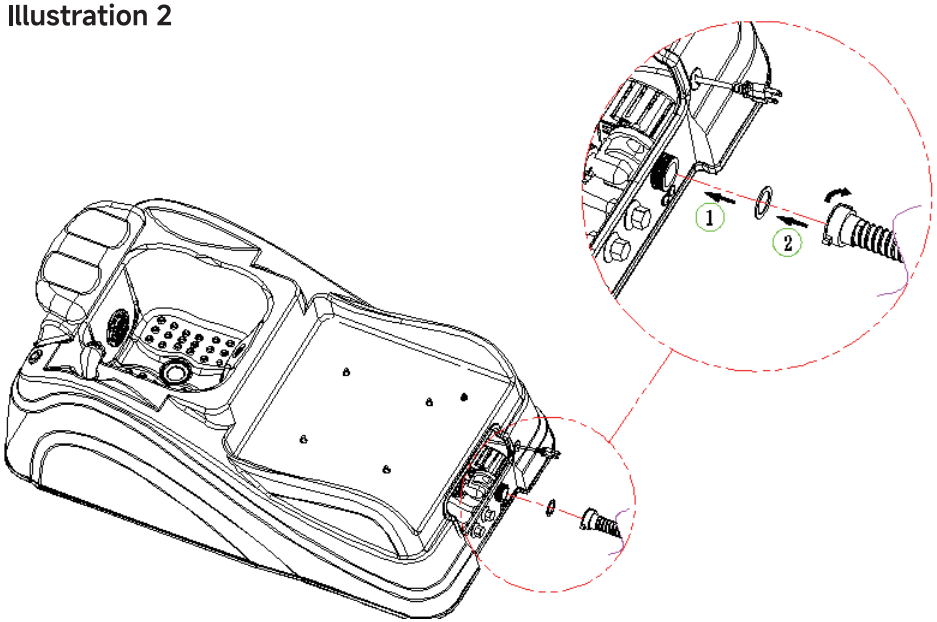

b) Put the end of drainage pipe into the floor drain outlet. (See as illustration 3)
c) Plug the power supply on. Now the foot SPA is ready. (See as illustration 3)

Illustration 3

5. Put the base of massage chair on the foot SPA. Use Allen key to screw the 4PCS* M8 inner hexagon screws together with the gaskets.

STEP 1 Put the base of massage chair on the foot SPA.

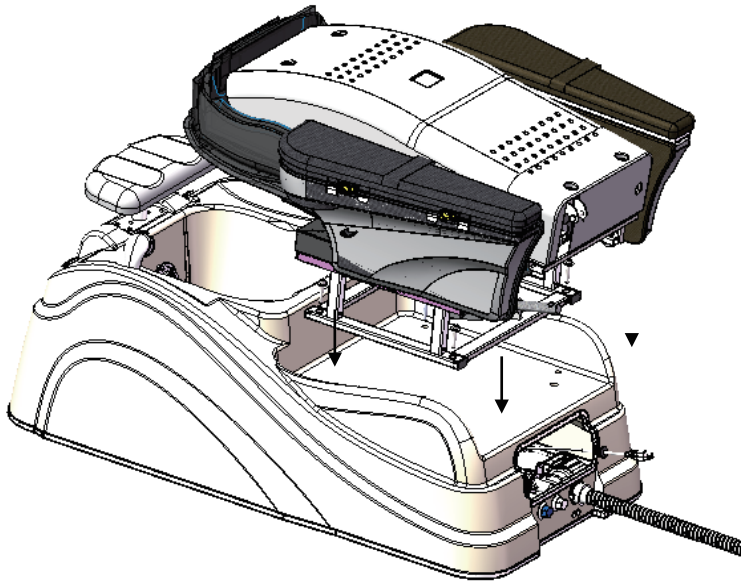

STEP 2 Stick your hand into the base through the repair hole on the backside of base. And then fasten the chair on the base by screwing the screw, gasket and spring gasket.

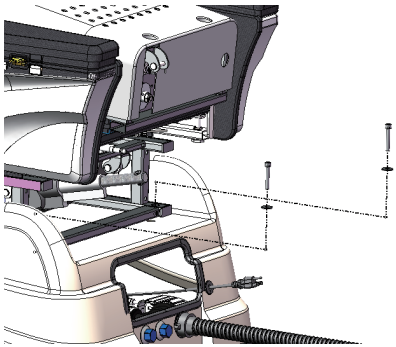

6. Assemble the backrest of foot SPA chair as illustrations below.

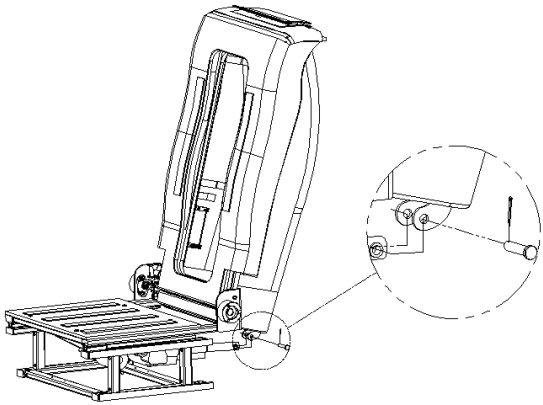

7. Assemble the armrest as illustration below.

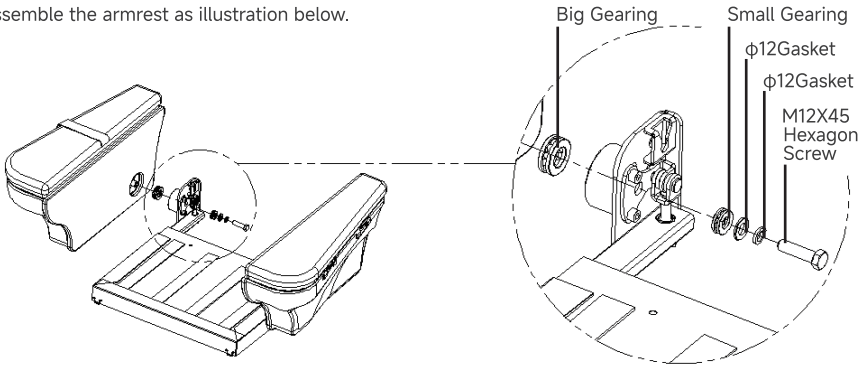

8. Assemble the upholstery for the backrest as illustration below.

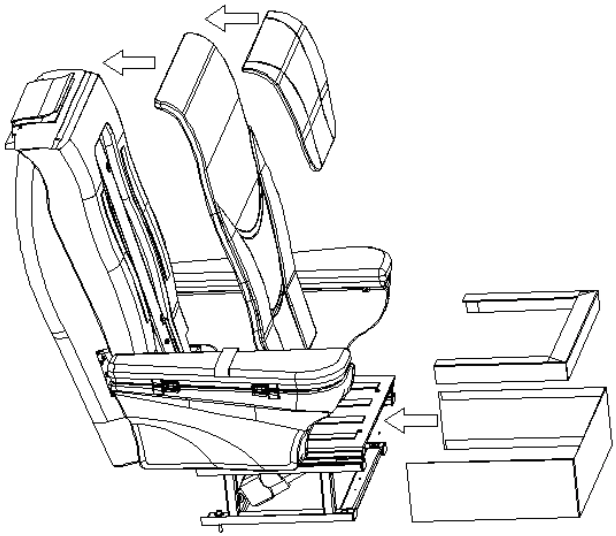

9. Put the cushion on the seat, while connecting the air pipe. Plug the motors on the control box corresponding to the number marked.

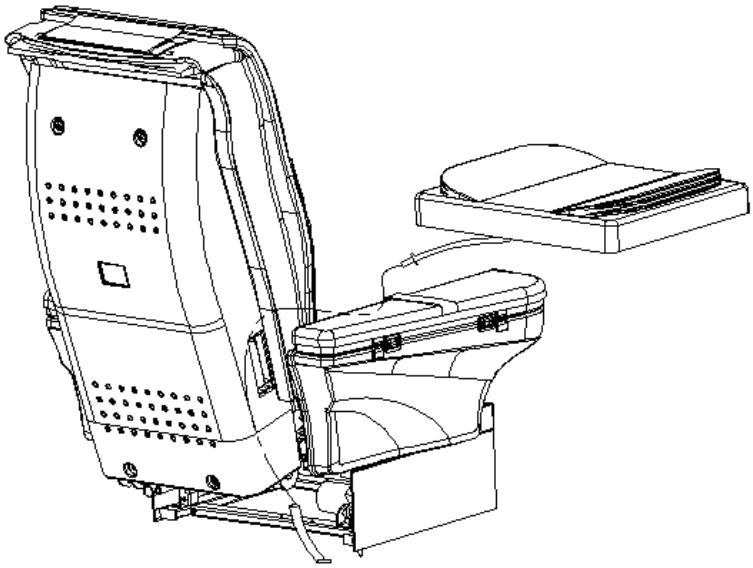

6. Operation Instruction

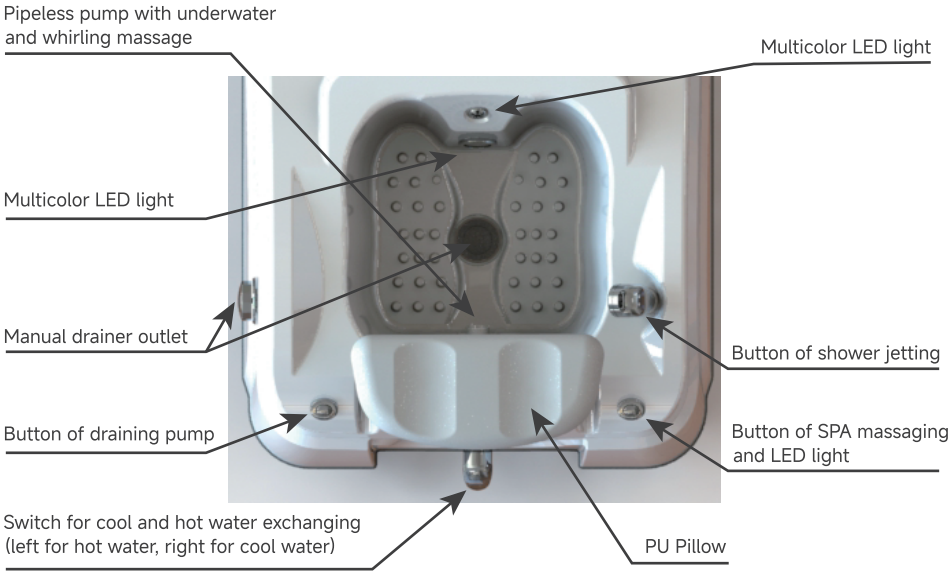

1. Footrest can be lifted up and down. Height adjustment range between 0~150mm.

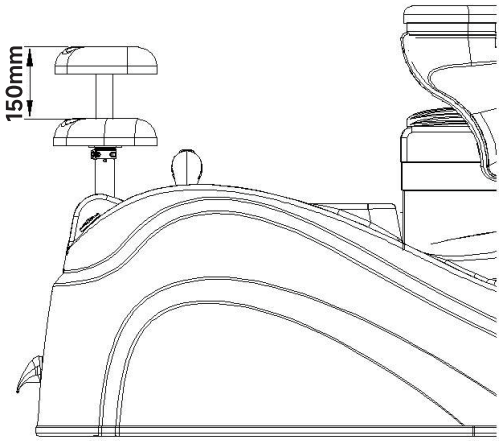

2. Draining function: turn the knob of manual drainer firstly when you want to drain water. And then press the button of drain pump which has the function of timekeeping.
3. Switch for cool and hot water exchanging---- adjust the water temperature by rotating it in clockwise or anticlockwise direction.
4. Button of SPA massaging and LED light--- Underwater and whirling massage works and LED lights up after pressing it. Repressing can stop massaging and lighting.

5. Description of The Hand Controller

1) LCD Display

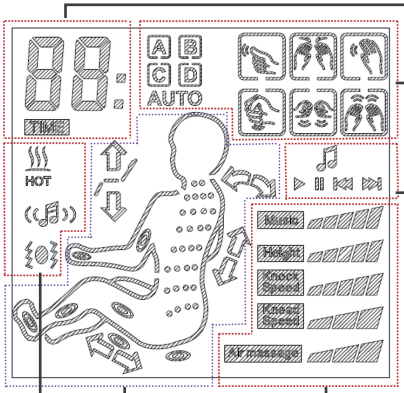

Timer for Massage

Massaging time
It's flashing during operation

Timer for Massage

4 Automatic working modes, A/B/C/D. But now mode C&D is unavailable. A or B will

light up if you selected it.
6 massage methods, the pattern will light up if you selected it.

Music Player

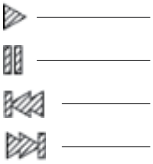

Play

Pause

Previous

Next

Five Adjustable Option

Optional Massage for the Part of Body

Other Functions

● Adjustable Option

Voice for player

Height of Massage

Speed of Knocking

Speed of Kneading

Intensity of Air Massage

● Optional Massage for the Part of Body

Adjustment for the Height of Seat

Adjustment for the Angle of Backrest

Adjustment for the Angle of Seat

Adjustment for the Massaging area

It lights up when the area is doing air massage

It lights up when the area is doing massage

● Other Functions

Heating system

The intensity of Massage keeps following the rhythm of music

Vibrating

2）Buttons of the Hand Controller

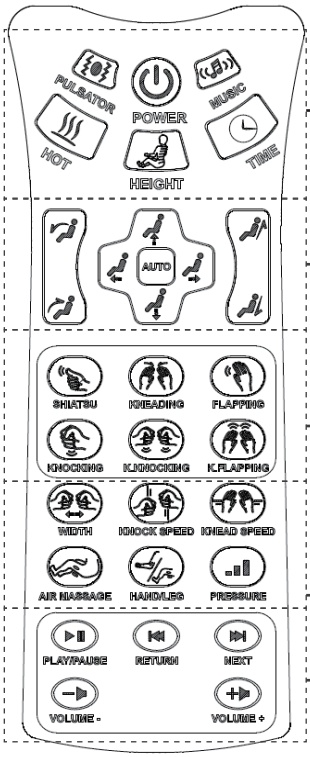

Main Functions

Vibrating (Unavailable for this moment)

Power on

The intensity of Massage keeps following the rhythm of music (Unavailable for this moment)

Heating (Unavailable for this moment)

Height of Massage, 5 optional degrees

Time setting, including 5min, 10min,15min, 20min as options

Chair Adjustment

Massage Methods

Other options

Music Player

● Chair Adjustment

Button for adjust the angle of backrest. Upper for decrease the angle, bottom for increase the angle. Keep on pressing button to continuously adjust the angle.

1. Press “AUTO” button for the automatic working mode of A/B.
2. Upper and bottom are for the up & down of the seat. Keep on pressing either of them to continuously adjust the height.
3. Left and right are for the forward & backward of the seat. Keep on pressing either of them to continuously adjust the seat.

Button for adjust the massaging part of the back. 7 massaging positions are as option

● Massage Methods

Finger Massage

Kneading

Tapping

Knocking

Kneading + Knocking

Kneading + Tapping

● Other Options

The adjustable distance between massaging hands

Knocking Speed, 5 degrees as option

Kneading Speed, 3 degrees as option

Start/ Stop air massage

Optional air massaging area (Unavailable for this moment)

Intensity of the air massage, 3 degrees as option

● Music Player

Play/ Pause (Note: Pause the music before plugging/unplugging the USB or SD card)

Previous song

Next song

Voice decreasing

Voice increasing

7. Cautions On Security

[Note: In order not to make lives at risk, please pay attention on following items.]

1. People who are under following sickness or having medical treatment should consult with doctor before use.
   (a) Women in Pregnant, people in sick or in poor health.
   (b) People with pain on the back, neck, shoulder or hip.
   (c) People who are implanted cardiac pacemaker or other medical devices which may cause electromagnetic interferences.
   (d) Patients with heart disease
   (e) Patients who are prohibited to having massage due to thrombosis, aneurysm, severe varicosity or other disease of circulation system.
   (f) Patients with curved vertebral column.
2. Do not put your finger/ toe into the gap between backrest and seat or armrest, even the joint part under seat as well.
3. It would be better to wear light clothes for treatment. But do not without clothing please. Do not have treatment when you wear something hard on your head.
   (a) Do not massage for over 5min at the first time of using this product. This is to avoid discomfort for muscle. You can increase the intensity or time of massage after some time.
   (b) Do not massage one part of body for over 5min every treatment.
   (c) Massage for overtime or improper intensity might stimulate muscle or nervous system excessively.
   (d) The total massage time has set up to no more than 20min. Four-wheeled massage hand will automatically stop working after 20min.
   (e) Remove the backrest cushion if you would like a massage with stronger effect. But please pay more attention on this way, since it's possible to cause back be painful or hurt. Besides, do not massage in this way for more than 15min each time.
4. If you feel uncomfortable or painful during massage, please stop massaging.
5. Do not have treatment after drink.
6. Massage with minimum intensity and speed at the first time of use. You might make some adjustment after use for some time.
7. Keep Children away from the foot SPA chair. The backrest should go up to Max position when you are away.

8. Cautions on Operation

[Note: In order to prevent product from damaging due to improper operation, please pay attention on following items.]

1. The components of foot SPA chair may be damaged if it is over-loaded. So please note that the specifications mentioned as below. Besides, it should be out of warranty if foot SPA chair is damaged due to over-loaded.
   (a) The Max. weight of the client sitting on the chair is 120KG.
   (b) Armrest should not be loaded over 30KG.
   (c) Foot SPA basin should not be loaded over 150KG.
2. Take good care of the hand controller, do not sit on it or drop it down. Armrest shouldn't go up when hand controller is placed on it.
3. Take good care of the upholstery of cushion.
   (a) Keep upholstery away from the sharp things, lighted ash of cigarette, or lighted match.
   (b) Keep upholstery away from direct sunlight, so as to avoid upholstery being discolored or aged.
4. Do not repair foot SPA chair without authorization.
5. Switches and buttons might be defective if you repeatedly switch on/ off in a short time.
6. If the performance of chair is defective or after you repair or replace a new circuit board, you can reinitialize the electric circuit board as following. Press the buttons of ⏻ and 🪑 on the hand controller at the same time, while power on. Release the buttons until four-wheeled massage hand work. Re-initialization is finished once massage hand stop working.
7. It is normal phenomenon that chair might be sound during operation.
8. Switch off the power after each treatment. [The switch is at the right side of chair, 0 means off]
9. In order not to be shocked by electric or make electric board damaged, please do not open the hand controller and control box without authorization.

10. Unplug the power cord before repair or clean the chair. Clean Chair with soft towel and some water. Please note that organic and volatile solvent shouldn't be used for cleaning.
11. If there is drain outlet on the ground for the basin, you could remove the rubber plug and put the pipe into the outlet during foot SPA. If not, please keep plugging from water leaking. (See photo as below)

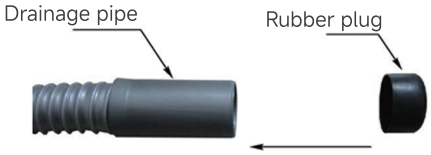

12. Signs of Error:
(a) There is "E1/ E2/ E3" showed on the timer 88, and it keeps flashing. Meanwhile, all buttons don't work.
(b) There is "88" showed on the timer 88, and it keeps flashing.

Code of Error	E1	E2	E3	88
Issues	Motors for movement are defective	Motor controlled for massage is defective	Four-wheeled massage hand is defective	Hand controller doesn't connect well with electric circuit board

9. Maintenance

1. Clean basin with cloth after SPA, so as to extend the lifetime of basin.
2. If there is dirt or slight scratches on the basin after using for a long time, you could sand it with a #2000 sandpaper and water.
3. It is unavoidable that basin will be ageing after using for a long time. Replace corresponding parts if necessary. If you found water dropping or leaking, replacing a new sealing gasket and tightening the nut can solve the problem. You may even add some glass cement on the joint if necessary.
4. Massage Chair might sounds loudly after using for a long time. Add some grease on the four-wheeled massage hand can solve this problem.
5. Clean with soft towel and some alcohol if there is dirt on the upholstery.

10. Specification

Input Voltage	AC110V、220V、240V as option
Input frequency	50/60Hz
Distance between upper and bottom wheels of massage hand	approx 0-600mm
Movement distance of four-wheeled	approx 450mm
Distance between left and right wheels of massage hand	approx 30-200mm
Speed for the movement of massage hand	about 14s per round
Pressure of Air Massage	30~40kPa
Adjustable Angle of Backrest	approx 105-125°
Distance Between forward and backward	approx 0-100mm
Distance Between Up and down	approx 0-100mm (only to 4122C)
Time setting	≤20min
Size of Foot SPA Chair	approx 1840 × 960 × 1400 mm (Length × Width × Height, Chair without slant)
Packing Size:	Massage Chair: 1380×730×620 (mm) Foot SPA base 1470×850×575 (mm)

Do not dispose of old or defective appliances in domestic garbage;
this should onlybe done through public collection points.

▲ Please check the product specification before use. This manual is for reference only. Specifications are subject to change without prior notice.