

**MAGNIFYING
LAMPS**

Production code: 1001A

ABSTRACT


Freestanding magnifying LED lamp, 5 wheel base

LUX KOZMETIKA d.o.o.

Zagreb, Croatia

1001A/1001AT Magnifier LED Lamp

Instructions Manual

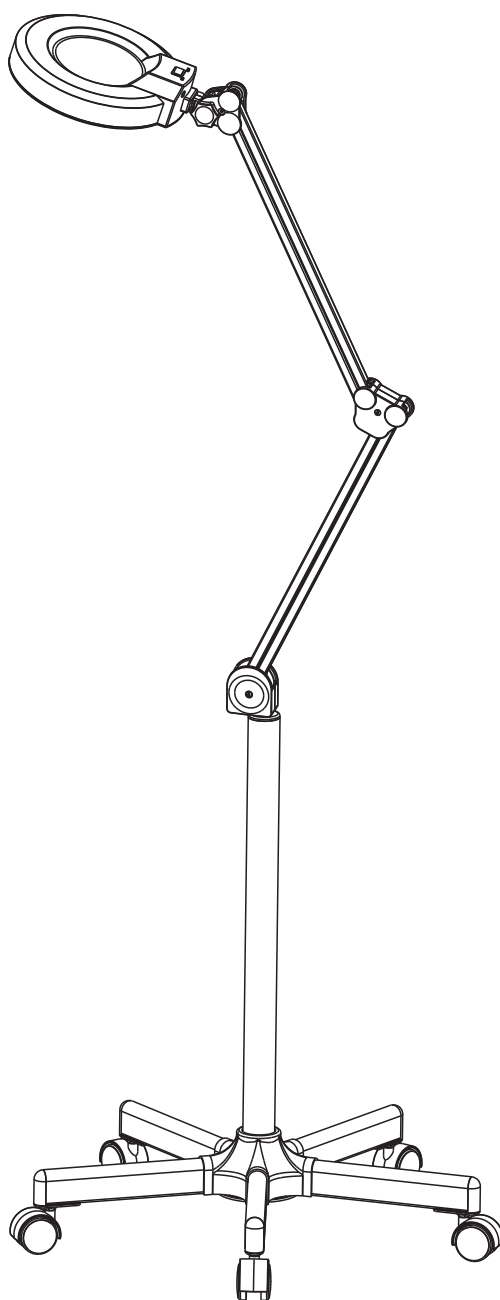

Please read this manual carefully before using the product.

1. Cautions:

- (1) Do not use in wet environments (like the bathroom). Clean your skin before operating.
- (2) Turn the power off after operation.
- (3) Please disconnect the product from power source if it is not being used for a long period of time. Clean the lamp head and cover it properly for storage.
- (4) Please wipe the lens with soft lens cleaning paper when cleaning the lens. Do not wipe with cloth and paper of other materials, otherwise the lens may be damaged.
- (5) Please avoid direct light projection to the eye.
- (6) If the external soft power cable is damaged, it can only be replaced by the manufacturer, service agent or personnel with similar qualification in order to avoid hazard.
- (7) WARNING “  ” (IEC 60417-6042): The light source can only be replaced by the manufacturer, service agent or personnel with similar qualification.

2. Instruction:

This device mainly detects changes in the human skin surface by examining the various minor changes in the skin surface. Providing further effectiveness when operating beauty and care treatments.

The magnifying function of the product can also be used for beauty treatments such as eyebrow and lips tattooing and eyelash grafting, etc.

The magnifying lens can be use independently with the supporting stand or in combination with other devices.

The magnifying lamp uses LED light source, energy saving and eye protecting, the brightness of the lamp is gentle and comfortable, users will not feel dizzy after using.

With innovative design and elegant profile, white glass with diopter of 5 is used to eliminate phenomenon of distortion, providing better visual effect.

3. Technical Specifications:

- (1) Input power frequency and voltage as below:

Rated Voltage (V)	AC 100-240V
Rated Frequency (Hz)	50/60Hz

- (2) Rated power and illumination: (illumination tested at a distance of 20cm)

6.0W, 2500 LUX

- (3) Diopter of Len: 5D

- (4) Working environment: Temperature -20°C ~ +45°C, relative humidity 30%~90%

- (5) Storage environment:: Temperature -20°C ~ +60°C, relative humidity 30%~80%

- (6) Net weight: 7.8kg


- (7) Gross weight: 9.1kg

- (8) Package dimensions: 84cm x 30cm x 15.5cm

4.Directions of Use:


- (1) Plug in the cold light lamp to a power source.
- (2) Turn the power switch to ON, aim the magnifying lens at the skin surface that needs to be examined or undergo beauty treatment.
- (3) Adjust the distance between the lamp and skin to achieve the clearest status (the optimum visual range: $\leq 10\text{cm}$)
- (4) Examine the skin or begin beauty treatment. Brightness can be adjusted during operation.

5.Magnifying Lens:

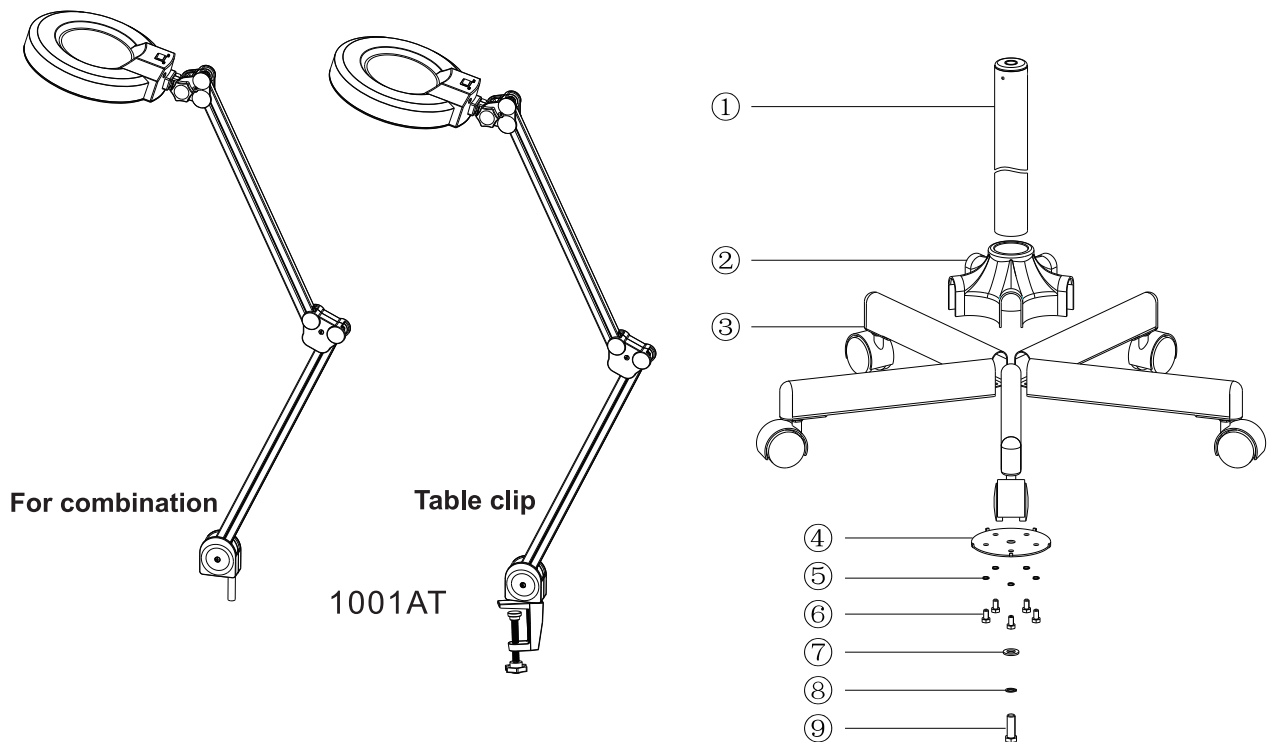

Installation Parts:

NO.	Name	Qty	NO.	Name	Qty
①	Column	1	⑥	Hexagonal screw $\phi 6$	5
②	Pentagonal base holder	1	⑦	Spring pad $\phi 10$	1
③	Five-legged stand	1	⑧	Flat pad $\phi 10$	1
④	Pentagonal clamp plate	1	⑨	Hexagonal screw M10X40	1
⑤	Spring pad $\phi 6$	5			

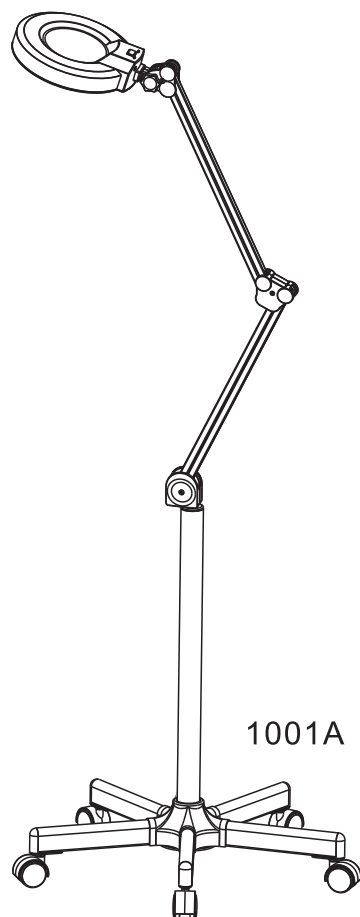

Please check and verify the product specifications before using it.
This manual is for reference only. No notification will be given for
any changes in the product specifications.